

FEATURES

- 36" x 36" Shower Walls for existing construction.
- Thick 1/4" 100% Solid Surface material for superior strength, beauty and easy cleaning. Surface will not support bacteria growth.
- Walls can be attached to moisture-resistant wall board, or directly over tile with supplied adhesive. Walls are trimmable for custom fit.
- Integrated pieces fit together for an easy, clean installation.
- Two wall shelves included for convenient storage
- Wall Kit includes two wrap around front edge trim pieces, front and side top bullnose trim pieces with coped, mitered inside corners, one 1-oz. tube mounting adhesive, four 11-oz. tubes 100% silicone adhesive and one roll mounting tape.
- 10 Year Limited Residential Warranty / 3 Year Commercial Warranty

COLORS

3 Transitions colors with a 16" x 16" square tile pattern.
3 Transitions and 3 Classic colors with plain pattern.

OPTIONS

- Extension wall panels add up to 24" of height to extend shower walls to ceiling.
- Shower base with concealed drain.
- 3 Wall Pockets: horizontal, vertical or arched and a Window Trim Kit also available. See Accessories Specification sheet for details.

Specified Model


	SIZE	MODEL NO.	DESCRIPTION	Width	Depth	Height		
SHOWER WALL KIT								
	36" x 36"	RBE3667	Shower Wall Kit	36"	to 36"	72"		
OPTIONAL COMPONENTS								
	36" x 36"	F3636	Shower Base	36"	36"	3"		
	36" x 36"	X3662	Extension Wall Kit	36"	to 36"	24"		
	Wall Pockets and Window Trim Kit (see separate spec. sheet)							
COMPLETE SHOWER KITS								
	36" x 36"	RKWF3667	Walls & Base Kit	36"	36"	75"		
	36" x 36"	RKWFX3667	Walls, Base, Ext. Kit	36"	36"	99"		

To Be Specified: Pattern/Color (see below)





Shown with F3636 Shower Base, X3662 Extension Wall Kit

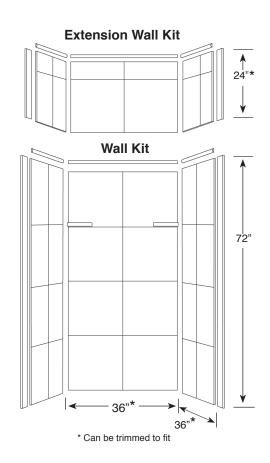


36" x 36" shower walls **RBE 3667**



INSTALLATION NOTES:


This product is to be installed according to the installation guide supplied with shower walls. This product designed to be installed over clean, smooth tile, waterproof drywall or cement board. If installing directly over tile, remove all loose pieces and fill for a consistent, smooth substrate.

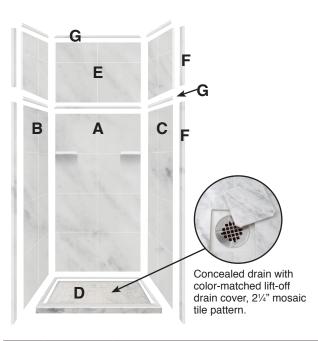

F. Outside Edge Trim Outside Edge Trim wraps around shower wall for finished

look

G. Bullnose Trim




The solid surface bullnose molding used along the top edge of the walls is contoured for easy fitting.


	MODEL#	DESCRIPTION	
Α	RB367	Back Wall (1 panel)	
В	RE367L	Left End Wall (1 panel)	
С	RE367R	Right End Wall (1 panel)	
D	F3636	F3636 Shower Base - center drain	
E	X3662	Extension Wall Kit	


OPTIONS: ACCESSORIES


Available for on-site installation. Must be ordered separately. See Accessories Specification for further information.











Arched Wall Pocket WSA1522

Horizontal Wall Pocket WSH2216

Vertical Wall Pocket WSV0830

Window Trim Kit WTK36

Product Information

	SHOWER DOOR			
MODEL NO.	MAXIMUM WIDTH	MAXIMUM HEIGHT		
RBE3667	33-1/2"	72"		