
KINGSTON BRASS THE TRADITION OF FINE BRASS

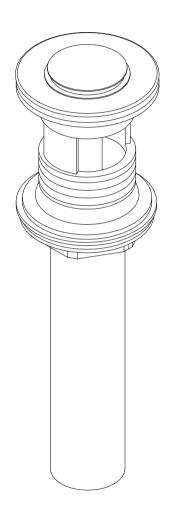

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710

KINGSTON BRASS

THE TRADITION OF FINE BRASS

INSTALLATION INSTRUCTIONS For Use With KB's Push Drain with Overflow

Need Tools:











Basin Wrench

Adjustable Wrench

Teflon Tape

Silicone Sealant

Screwdriver

INSTALLATION:

- 1. Remove the Locknut(6), washer(5) and rubber gasket(4) from the drain body(2). Push rubber gasket(3) upwardly against the underside of flange of drain body(2).
- Insert the drain assembly (1)(2)(3)(7) downwardly through the drain opening on the bottom of sink. So the tailpiece(7) and the outer threads of drain body(2) can go all the way through the drain opening and expose beneath the sink.
- Adjust rubber gasket(3) to fit in the drain opening snugly. Make sure the taper-surface side of the rubber gasket(3) is downward
- 4. Install rubber gasket(4), washer(5) and locknut(6) upwardly onto the drain body(2) from the end of tailpiece(7). Make sure the taper-surface side of the rubber gasket(4) is upward.
- Slowly tighten up the locknut(6) with a wrench until the rubber gasket(4) can completely and tightly seal the drain opening beneath the sink.
- Turn the tailpiece(7) by hand to remove it from drain body(2).
 Apply Teflon tape on the threads of tailpiece(7). Then re-connect it tightly with drain body(2).
- 7. Push the stopper(1) to the close position of the flange body(2), then turn on faucet to full fill water in the sink. Examine and make sure no water comes out from the tailpiece(7).
- 8. Push the stopper(1) to the open position to drain water, examine to make sure no water leakage around the rubber gasket(4) or connection with tailpiece(7).

 If leakage found, adjust the rubber gasket(4) and re-tighten up the locknut(6) until no more leakage.

